 
 
 




BL-A/TX



 
QE-AC1/1.0/RX

433.92 MHz

-10 +55 °C

100000 nr

12









Ø75


10

   Ø100

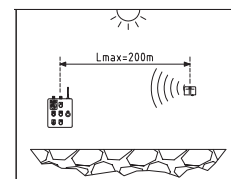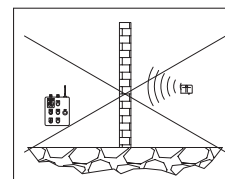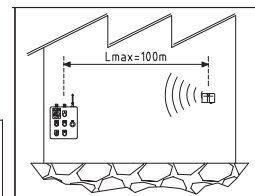
7



	ON
	OFF
	LOW BATTERY

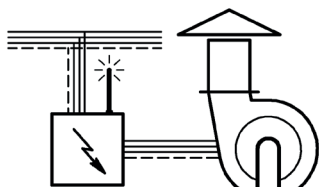 

QE-AC/RX

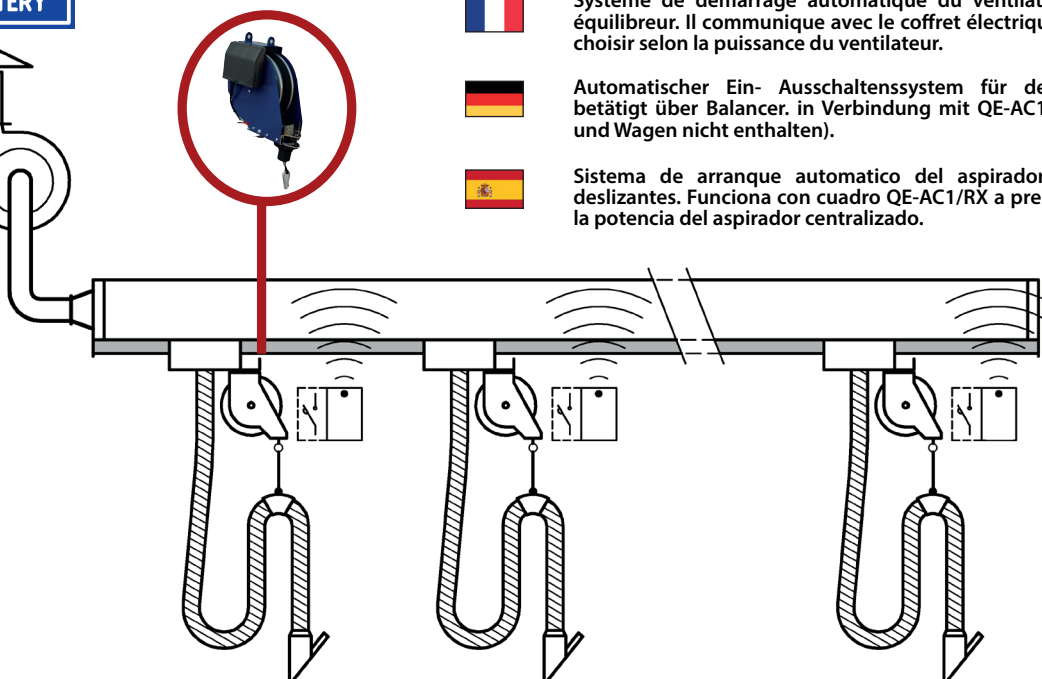 

Sistema di partenza automatica del ventilatore montato su bilanciere. Comunica con il sistema di ricezione QE-AC1/RX da collegare al ventilatore centralizzato.



Automatic start/stop system for sliding carriages. It works in connection with QE-AC1/RX to be ordered separately in accordance to the power of the centralized fan.



Système de démarrage automatique du ventilateur monté sur équilibre. Il communique avec le coffret électrique QE-AC1/RX à choisir selon la puissance du ventilateur.



Automatischer Ein- Ausschaltensystem für den Laufwagen, betätigt über Balancer. in Verbindung mit QE-AC1/RX. (Steuerung und Wagen nicht enthalten).



Sistema de arranque automatico del aspirador para carritos deslizantes. Funciona con cuadro QE-AC1/RX a presupostar según la potencia del aspirador centralizado.